


THREE CORE AND
EARTH 1.0 CABLE

WIRING DIAGRAM WD01
Wiring Centre: Salus 5 Zone 230v
Thermostats: Salus Quantum

bach

HEATING & VENTILATION SYSTEMS
info@bachsystems.co.uk 0330 333 9263

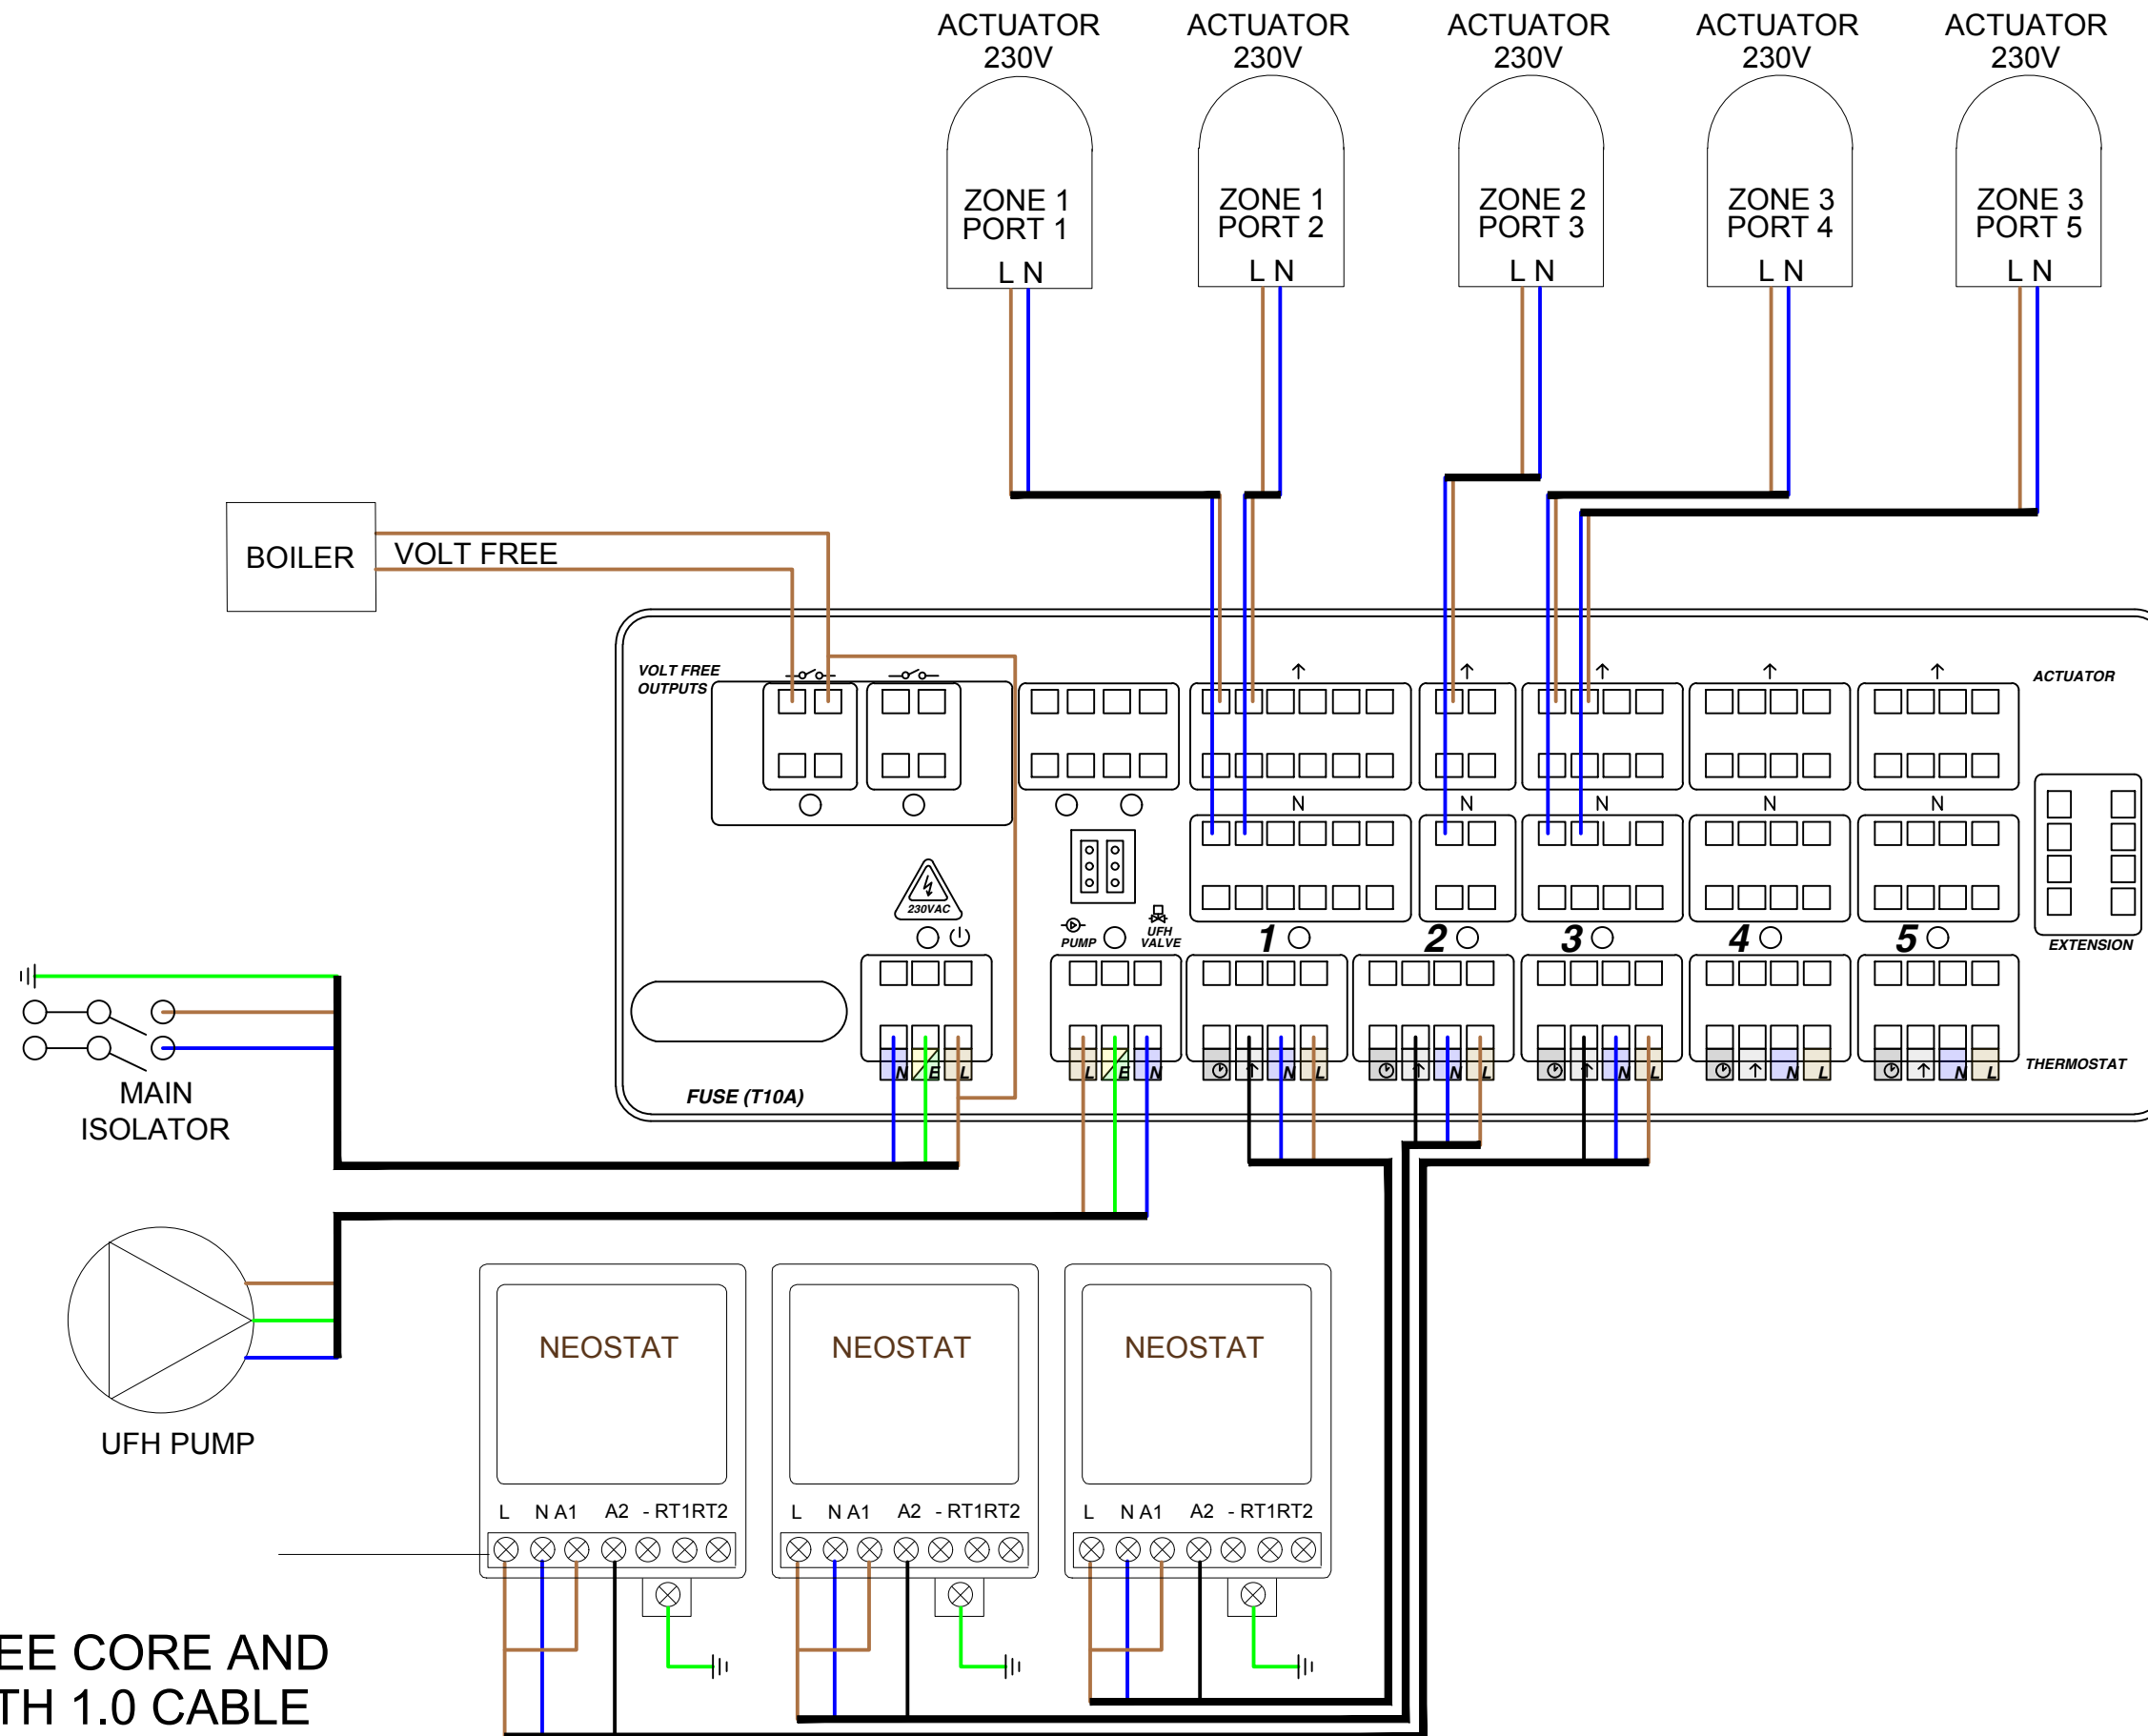


THREE CORE AND
EARTH 1.0 CABLE

WIRING DIAGRAM WD02
Wiring Centre: Salus 5 Zone 230v
Thermostats: Heatmiser NeoStat

bach


HEATING & VENTILATION SYSTEMS
info@bachsystems.co.uk 0330 333 9263

THREE CORE AND
EARTH 1.0 CABLE

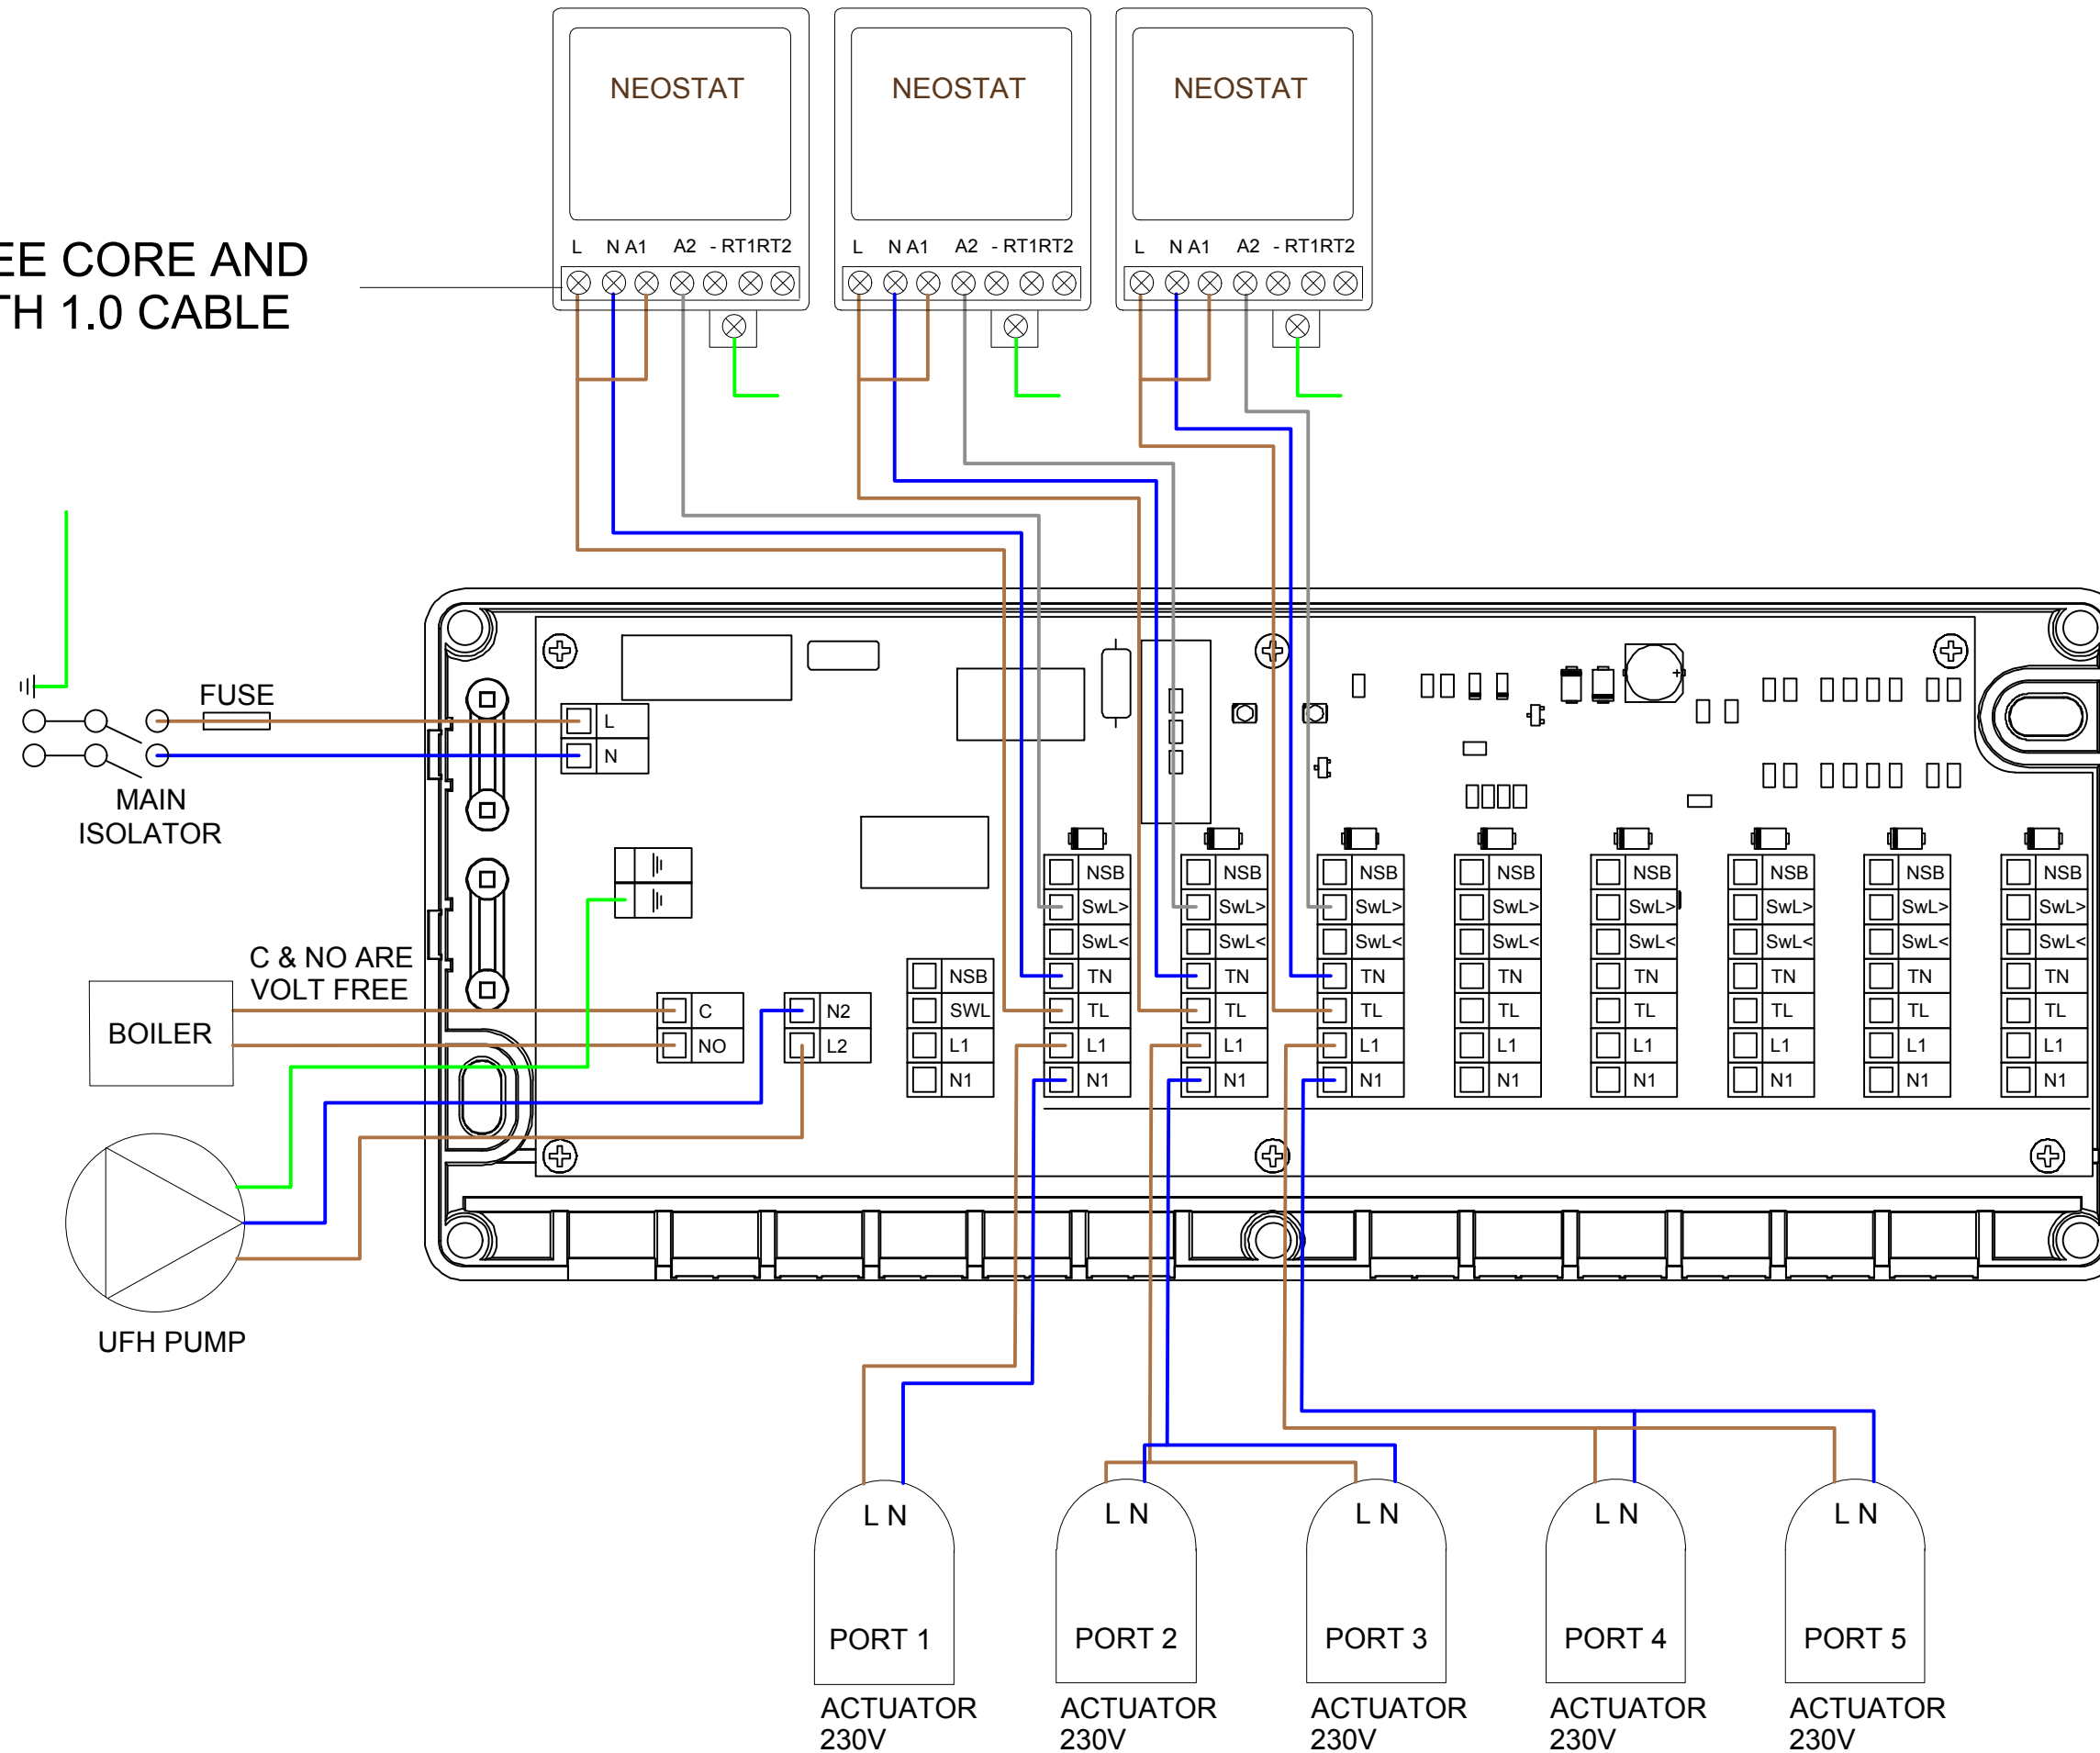


WIRING DIAGRAM WD03
Wiring Centre: EWC-01 8 Zone
Thermostats: Heatmiser NeoStat


THREE CORE AND EARTH 1.0 CABLE

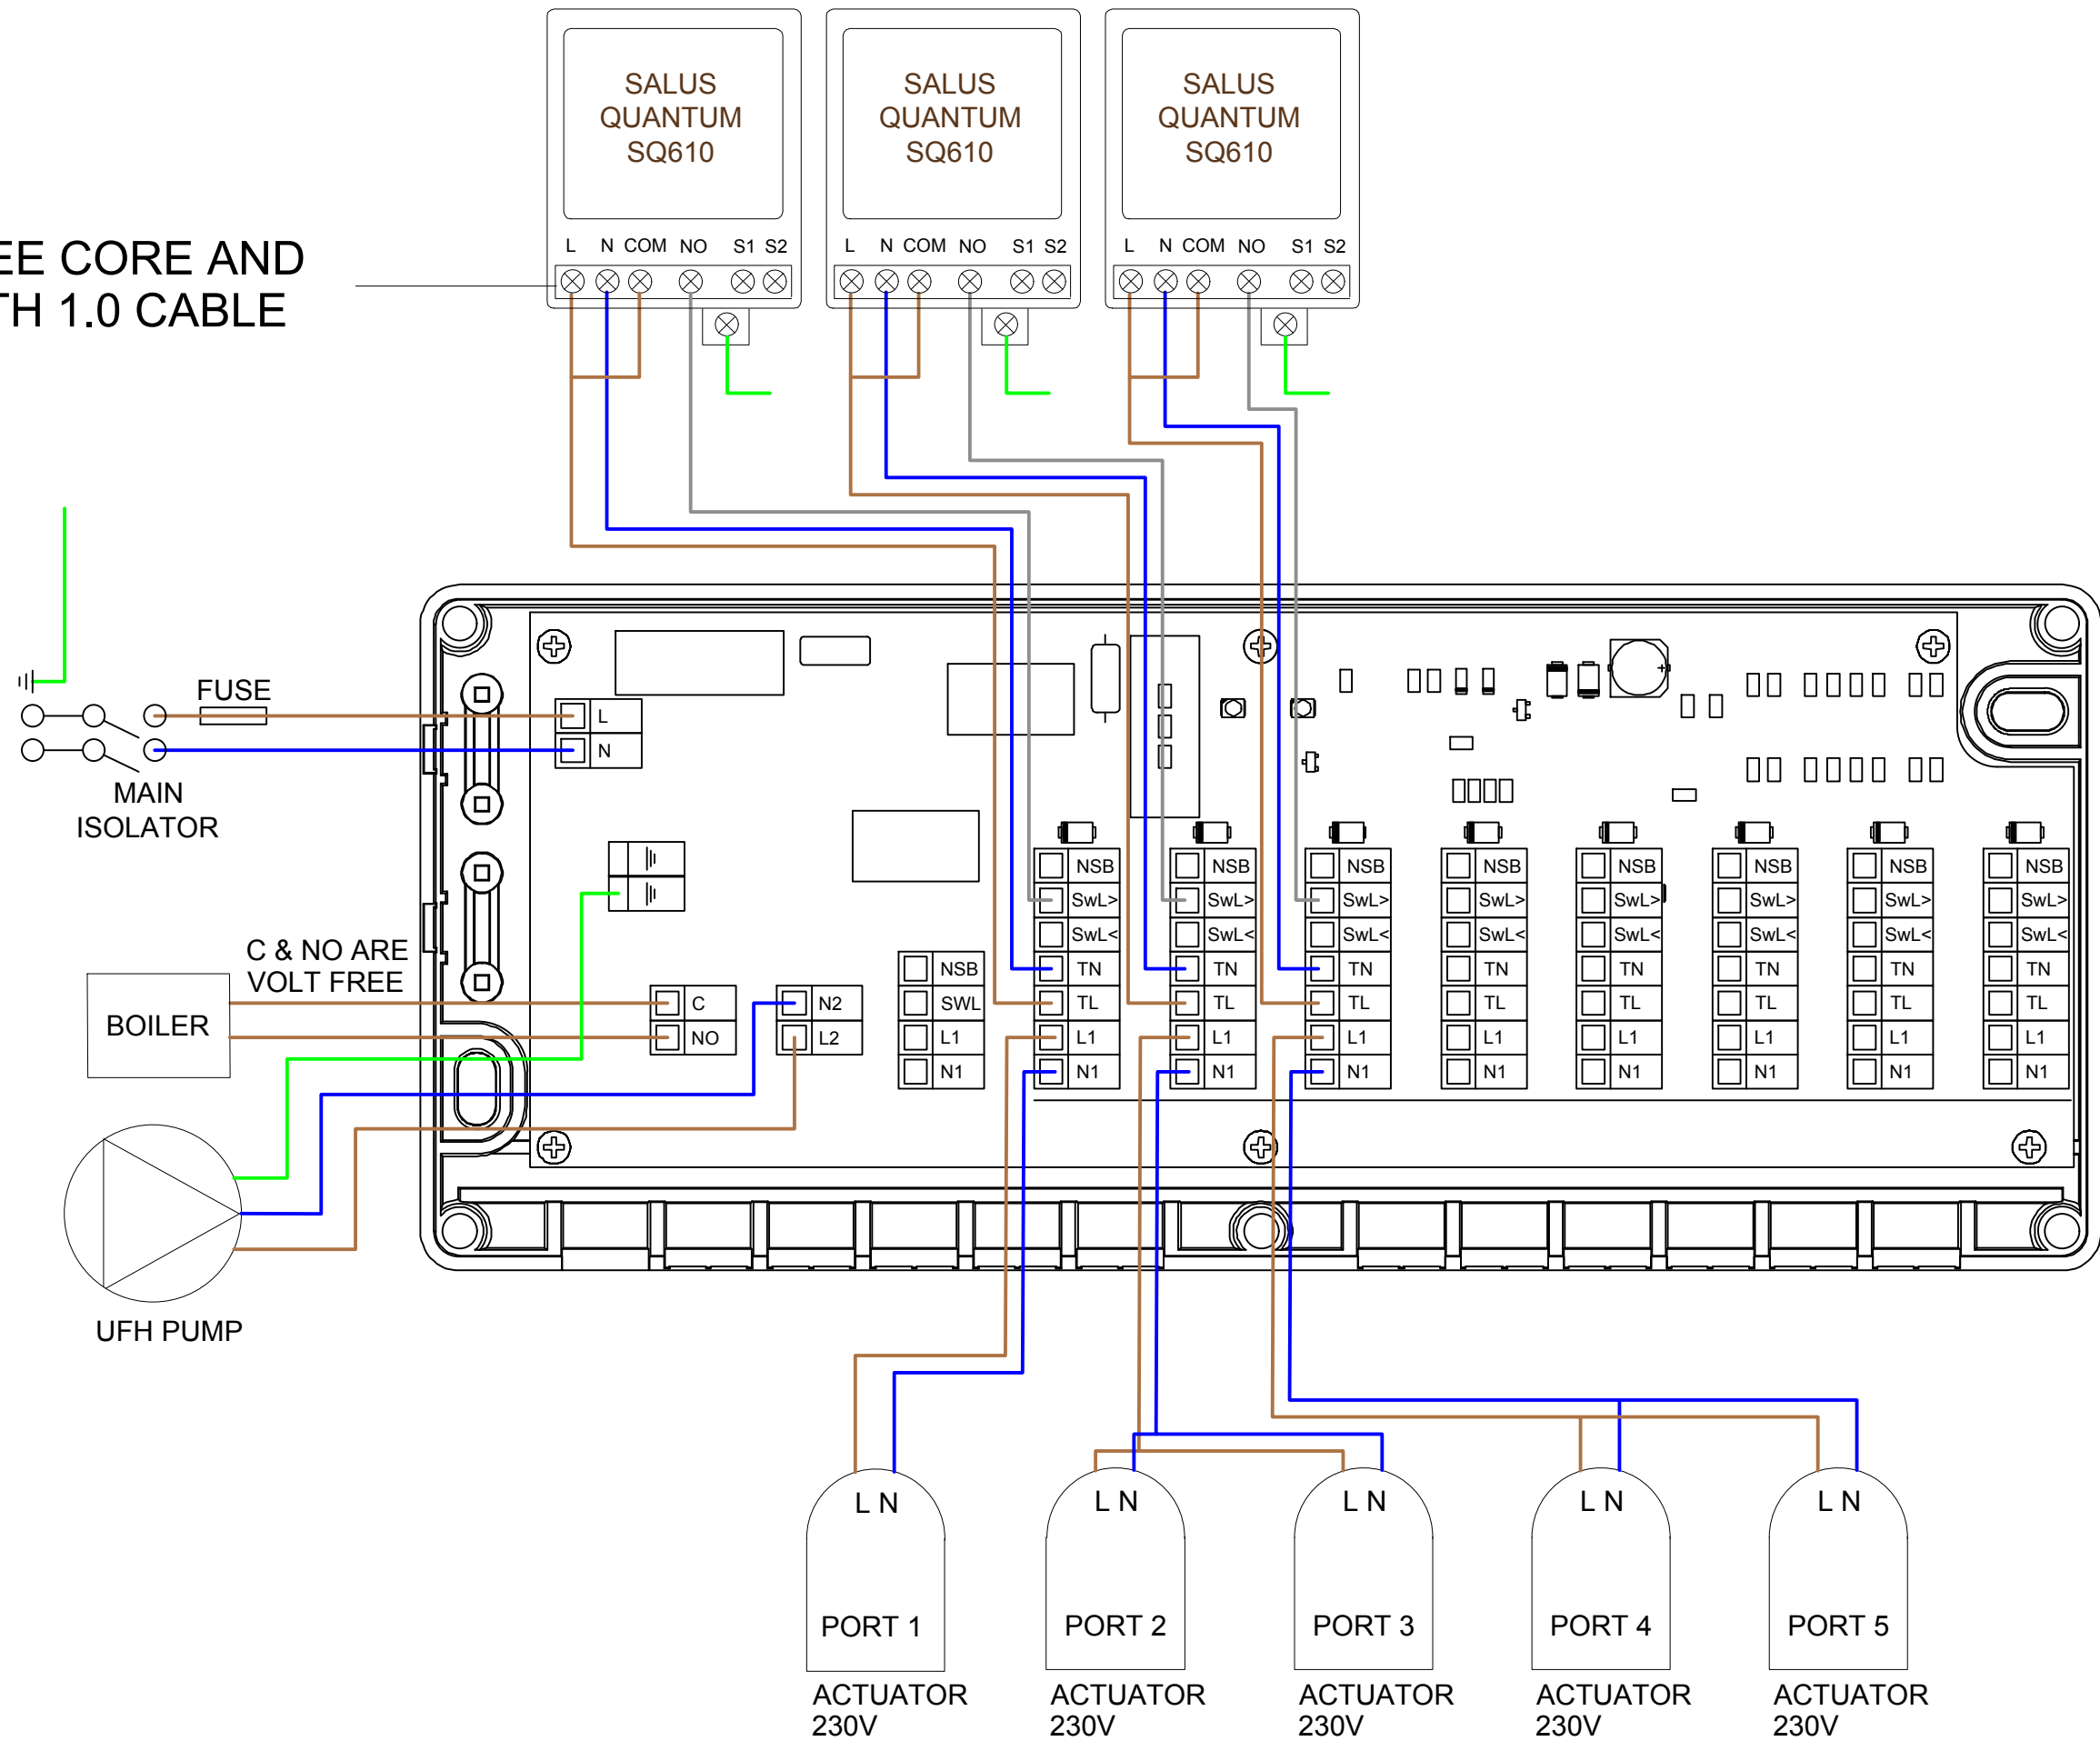

WIRING DIAGRAM WD04
 Wiring Centre: EWC-01 8 Zone
 Thermostats: Salus Quantum

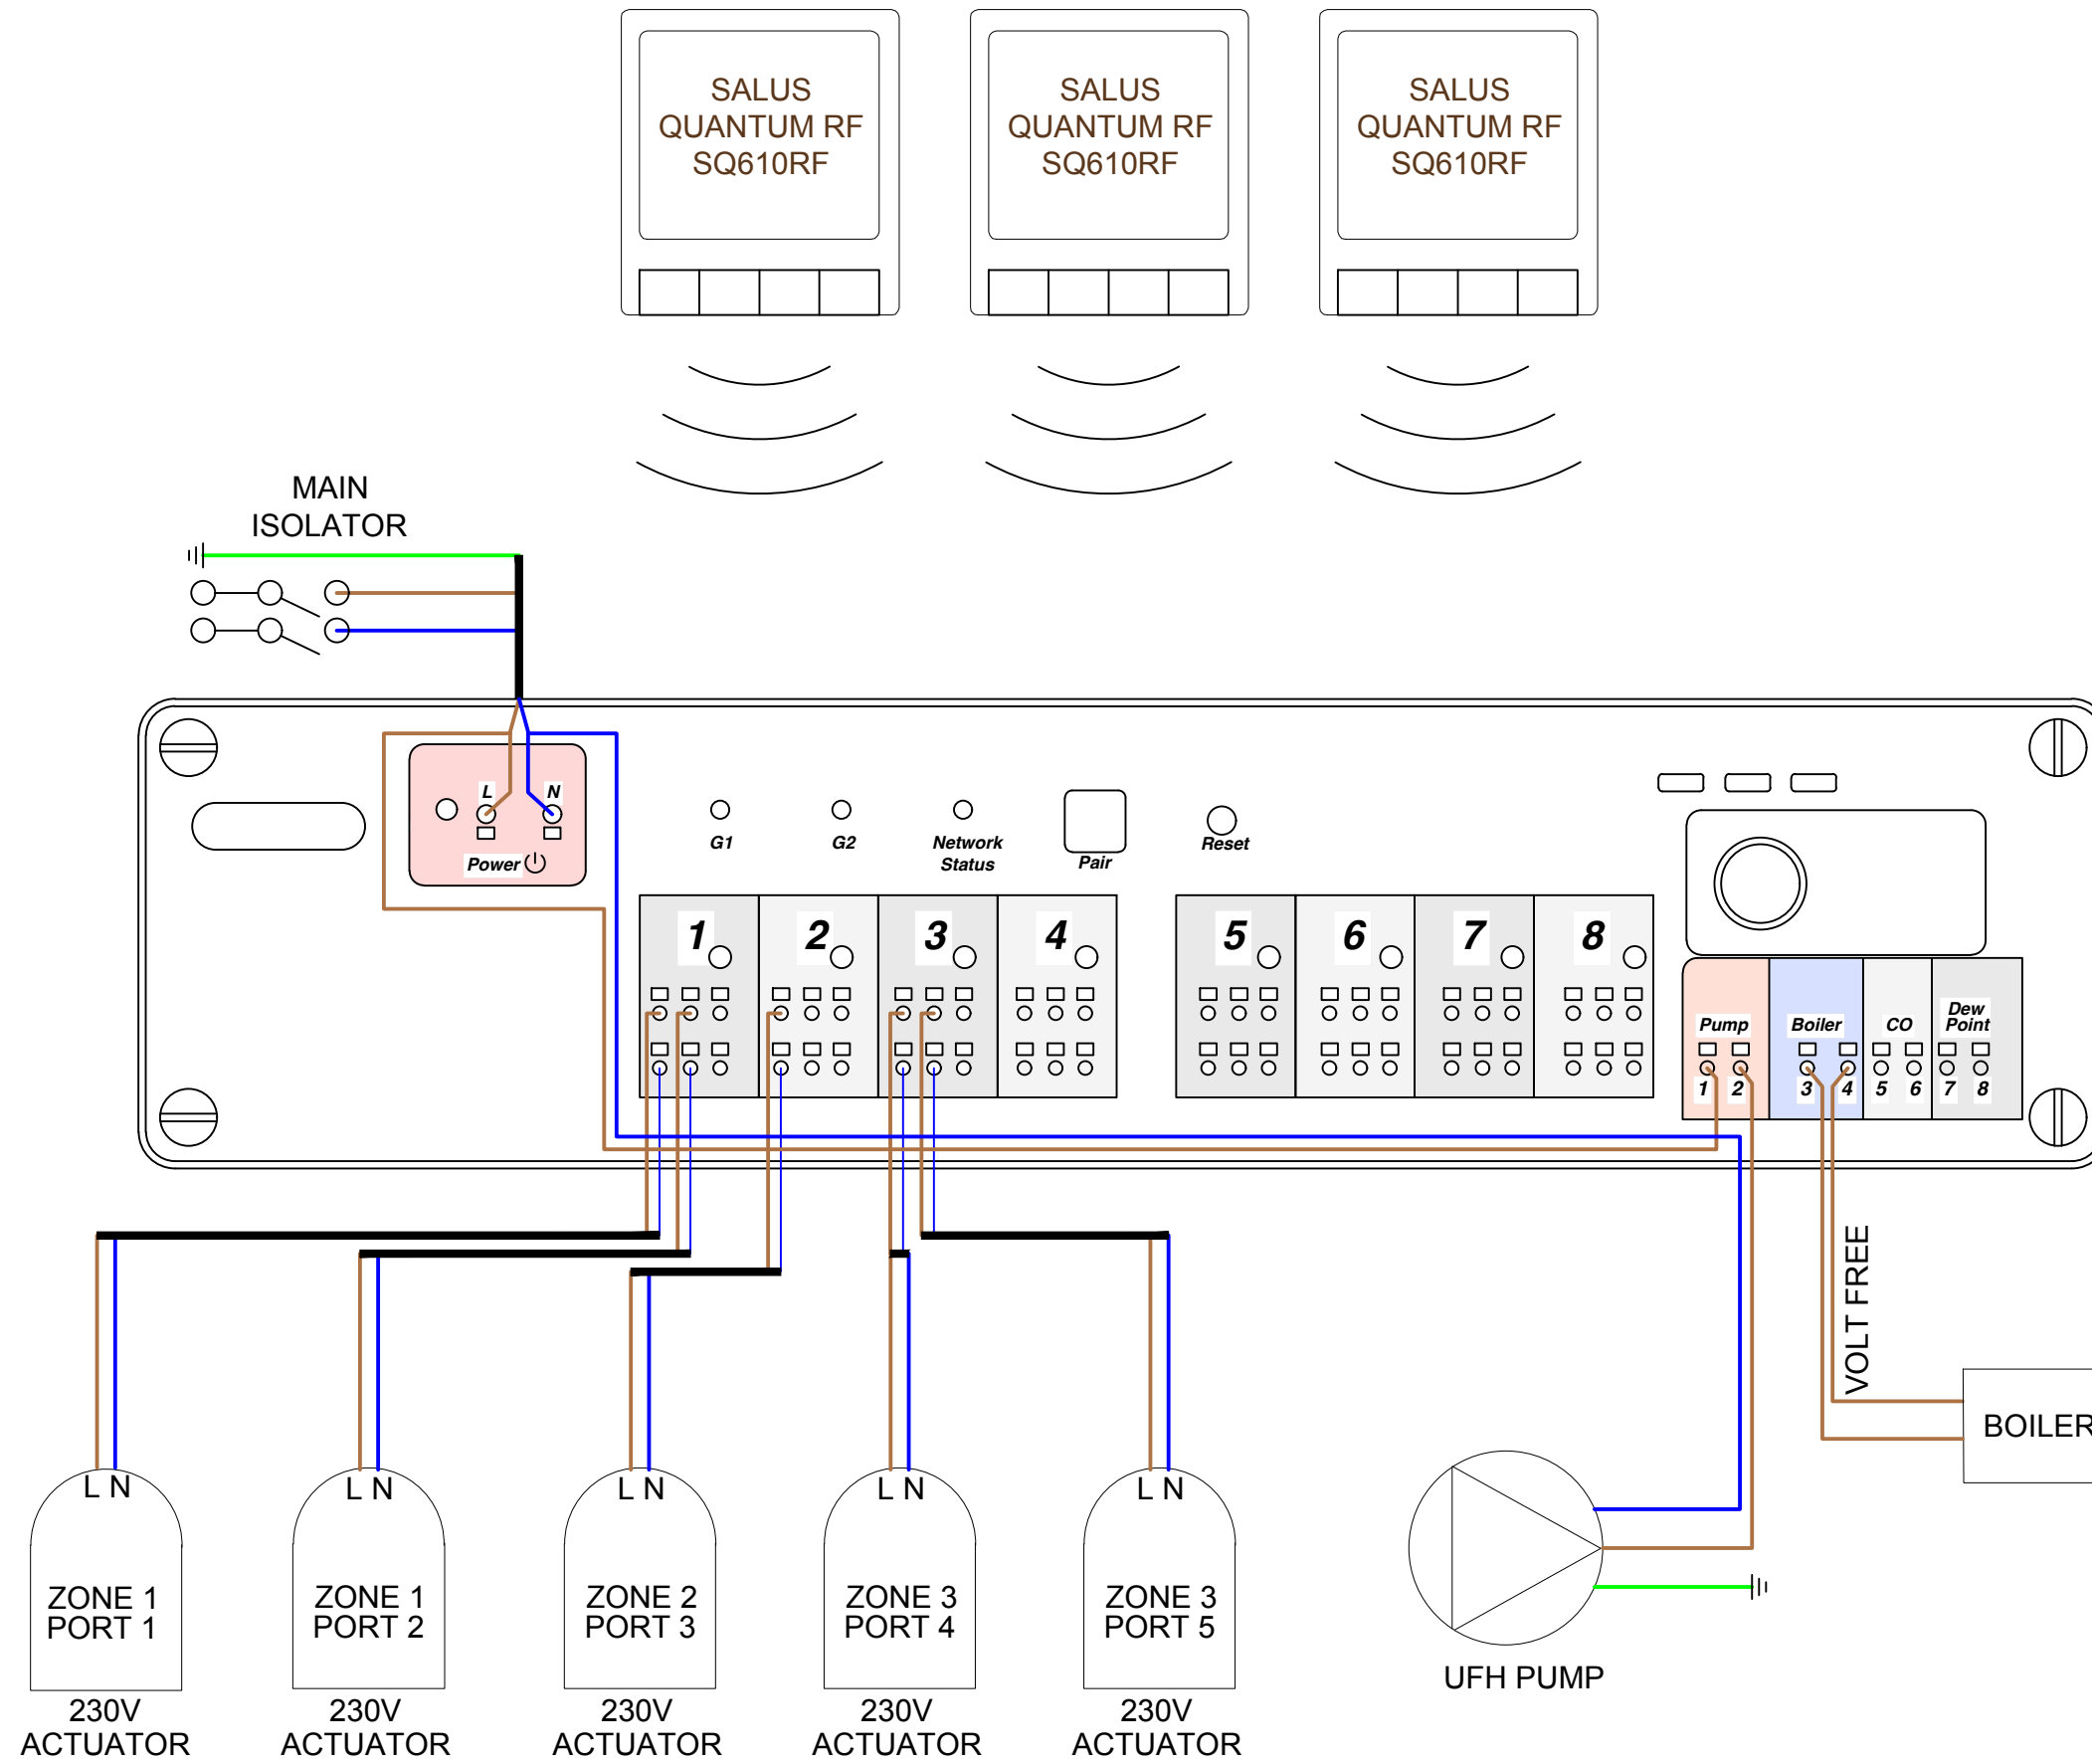

WIRING DIAGRAM WD05
Wiring Centre: Salus 8 Zone RF
Thermostats: Salus Quantum RF

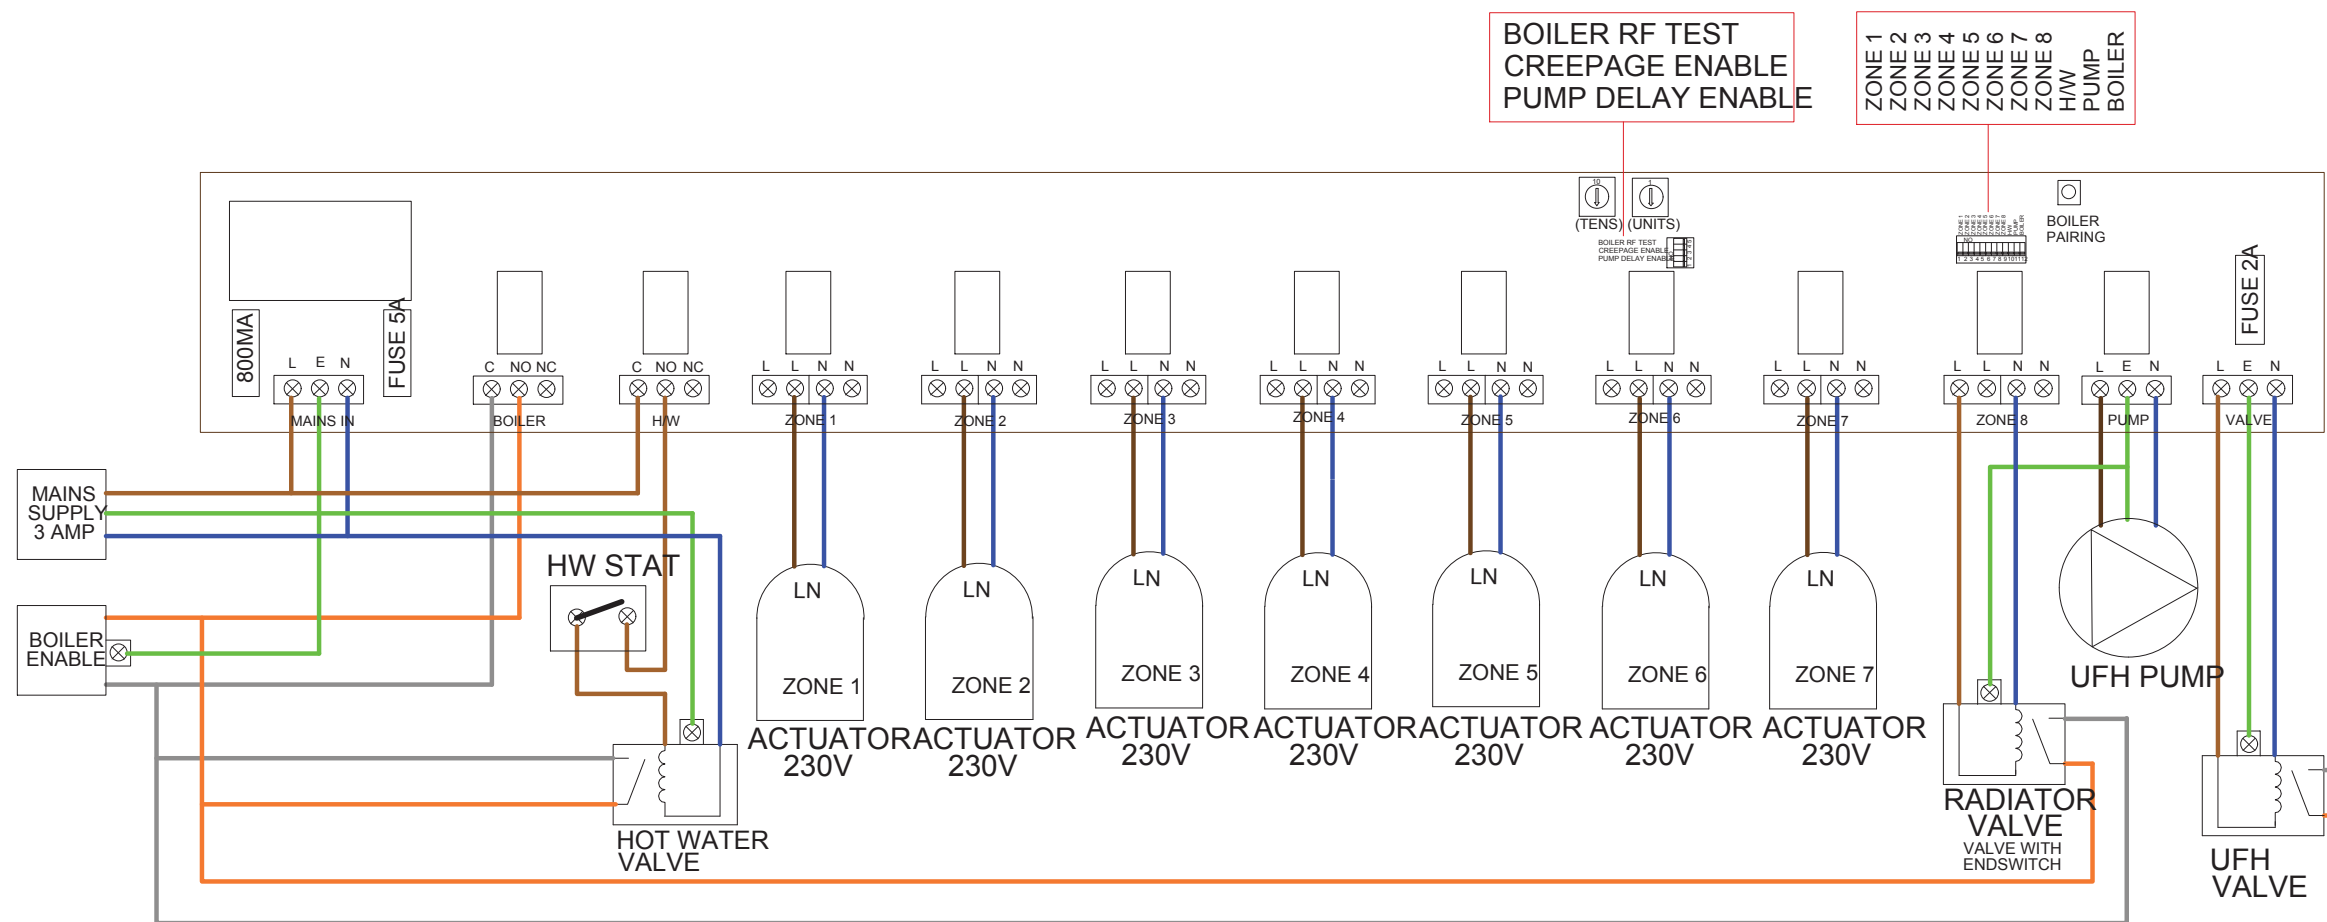

WIRING DIAGRAM WD06
Wiring Centre: Heatmiser UH8RF
Thermostats: Heatmiser NeoAir